

MICMOL

# AQUA POD



**Hello! Thank you for buying Aqua Pod Mini Aquarium Tank. Please read this instruction carefully before using this product to make sure you can use it correctly.**

Please keep your relevant warranty certificate with the date of purchase and we promise to serve you all the time after you purchase this product.

● **Important Safety Instruction**

You shall always take basic precautions during the use of this product, including the following contents:

● **Warning**

The water pump and filter contain magnets.

1 Stay away from pacemakers, defibrillators, credit cards and electronic storage media. The following warning instructions apply to this product and the tools and accessories required when applicable. For reducing the risk of fire, electric shock and injury:

2 Persons with physical, sensory or intellectual disabilities and those (including children) without relevant experience and knowledge can only use this MICMOL product under the supervision or guidance of a guardian to ensure that they can use it safely.

3 Please do not use this product for other purposes (e.g. storing food, beverages, chemicals and so on)

4 Please do not run the filter system for a long time without water injection, otherwise, the damage caused by this operation will not be warranted. In case of the above situation, the function of the product can be tested by power on for a short time (about 15 seconds).


5 Please use a 5V 2A power adapter with local regulatory approval. Do not use it if the power supply cords or other functions are damaged. The damaged cords must be repaired by MICMOL, and its Agency Service Provider, Distributor or personnel with relevant qualifications to avoid dangerous situations.

6 Please do not pour the water in the aquarium from the water filling place, so as not to cause light damage that is not covered by the warranty (drain water from the sewage outlet provided at the bottom of the aquarium)

7 Please do not touch the USB plug with wet hands and pull the power supply cord when switching off the electricity. Please grab the plug instead of the cord when putting out the power plug. Do not bend the power cord at the plug (e.g. an angle of 90 or more is formed between the power cord and the plug.).


8 Please disconnect the power supply or put out the plug before cleaning and maintenance it and remember that this product can not be soaked in water for cleaning. When cleaning the cylinder body, please do not use detergent, steel wire balls and hard tools to avoid scratches. Toothbrushes and soft cloth are the best tools for cleaning the aquarium.

**Product Structure Diagram**

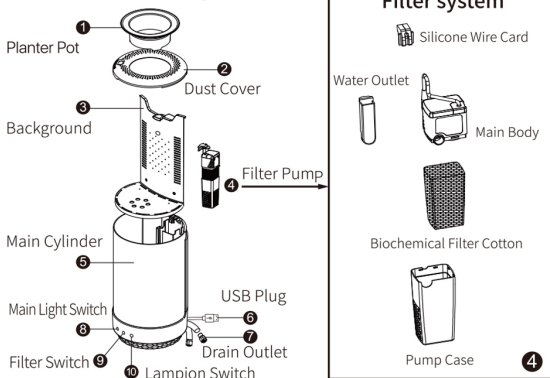

**Tip: The water pump can be completely disassembled. Pumps are recommended to be cleaned at least once every two months to improve the filtering effect.**

**Tips for adding water**

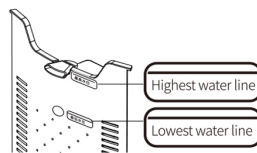

● Please fill up the water to the highest water line for the first time. Please do not worry about the abnormal noise that may occur in the water pump that is caused by air in the water pump. You can take out the water pump and immerse it completely in the water for a while, but please ensure that the water level does not exceed the position of the patch head.

● Please full water in time when the water line is close to the lowest level.

**Tip: When filling water, please ensure that the filled water does not exceed the highest water line to prevent the water from overflowing.**

**Functions**

**Main Light** (it can be turned on or off when touched lightly and be pressed for a long time to adjust the brightness of the light; the adjustment will take effect after restarting; the default brightness is 80%; and it will automatically be turned off after 8 hours of continuous use)

**Pump** (Please press for 2 seconds to turn off when feeding, and it will automatically turn on after being off for 15 minutes).

**Color Light** (the light can be turned off after all the light colors that can be changed when touched lightly, and can be turned off by pressing for a long time in any color mode)

**Maintenance**

1 Please change 50% of the water in the fish tank every week to create a good environment for the fish. In addition, please change the water at least once a month, because if the water is not changed for a long time, the ecological balance will be affected. At the same time, it is not recommended to raise fish in the bare tank, especially when raising marine fishes, professional filter materials need to be placed.

2 Please avoid scratching by using hard tools when cleaning the fish tank. It is best to use toothbrush and soft cloth instead of detergent and steel wire balls when cleaning. Wipe the surface of the fish tank with a softer cloth.

**Tip:** This fish tank cannot be directly laid with fine bottom sand.

Please do not move the fish tank when it is filled with water

**Warning:** The independent sewage outlet is designed at the bottom of the fish tank. Please do not pour water directly from the top of the fish tank to save labor. This will not discharge sewage and may cause circuit damage to the lighting part.

**Frequently Asked Questions and Solutions**

1 When the product or some functions do not work, please first check whether the main power socket has electricity and whether the plug is a standard 5V2A certified one. Please do not use inferior plug when trying to replace the plug.

2 There will be loud noise when the filter water pump does not discharge water, because there is air in the unused new water pump. Please take out the water pump in the pump bin (it is not necessary to unplug its power cord), immerse the water pump with all the outlet nozzles removed in the water of cylinder, and then run it with electricity for a moment. If the water pump is still not running smoothly, please split the water pump and check whether there are foreign matters in the magnetic rotor of the main body of the clean water pump (magnetic chips is extremely likely to be generated during transportation). After a period of use, it is usually necessary to split the water pump for every few months and use cotton sticks to clean the dirt adsorbed on the filter cotton, rotor and rotor operation space.

3 Please check whether it is blocked when the drain outlet does not work. The drain head can be slightly pulled out or removed, and then try to carry out ventilation detection on the drain outlet of the aquarium without water.

**No warranty**

MICMOL does not guarantee the repair or replacement of products with defects caused by the following reasons:

1 Damage caused by failure to implement product maintenance recommendations.

2 Accidental damage and failure caused by carelessness, misuse, negligence, rude operation or any operation in violation of the operation manual.

3 Use the product for any purpose other than aquarium

4 Use of inferior or non-original accessories

5 Repairs or alterations not performed by MICMOL or its authorized agents.

6 Faint traces of normal wear and loss

If you have any questions, please contact us.

**Overview of Warranty Scope**

1 Warranty shall take effect from the date of purchase (or delivery, if the delivery time is slightly later than the purchase time).

2 You must provide proof of the (initial and any subsequent) delivery/purchase of the product, such as invoices or receipts, before any after-sales service.

3 Please send your products with problem to sellers or after-sales service providers, and then all the after-sales work will be completed by MICMOL or authorized agent distributors.

4 Any replaced parts will be owned by MICMOL.

**Disposal Information**

1 The materials used in MICMOL products are high-grade recyclable materials. Therefore, please recycle them as much as possible.

2 Please dispose of exhausted products in compliance with local laws or regulations.