




## Smart Controller Setup

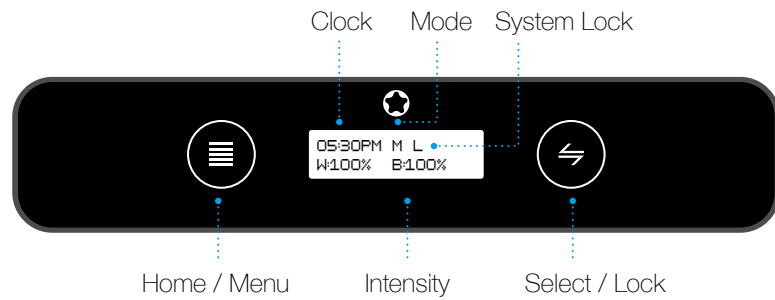

**Home / Menu** - Browse menu.  
 Special Function 1 : Hold on 3 second to return to the previous menu.  
 Special Function 2 : Hold on 3 second under locked to switch Auto & Manual mode.

**Select / Adjust** - Enter the sub-menu to adjust the parameters.  
 Special Function 1: Hold on 3 second to unlock system.  
 Special Function 2: Hold on 3 second to lock system.


	Auto Mode		Manual Mode	
Systems Loadings iMOS 3.0M	05:30PM A L W:060% B:060%	05:30PM A LT S:030%	05:30PM M L W:100% B:100%	05:30PM M LT S:100%
Boot screen	Home screen 1	Home screen 2	Home screen 1	Home screen 2

Note: "A" = Auto Mode, "M" = Manual Mode, "L" = Locked, "LT" = Lightning ON.

## Setting Up Your Aqua Air now.


### 1) Set Clock

- Hold for 3 seconds to unlock controller
- Press to enter main menu
- Press to toggle through options
- Press to select 1) Set Clock menu
- Press to adjust time.
- Press to toggle through options
- Press to return to main menu

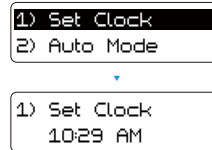

### 2) Auto Mode - Set LEDs (e.g: Set White Channel)

- Hold for 3 seconds to unlock controller
- Press to enter main menu
- Press to toggle through options
- Press to select 2) Auto Mode menu
- Press to select Set White menu
- Press to adjust Dawn time.
- Press to toggle through options
- Press to select Intensity
- Press to adjust Intensity.
- Press to toggle through options
- Press to move to next setpoint
- Repeat Steps 5-9 for Sunrise, Midday, Sunset, Dusk and Night
- Press to return to main menu

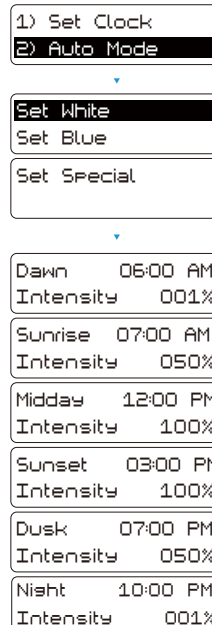


### Auto Mode (Set Blue & Special Channel)

Set the Blue Channel and Special Channel which is same as the White Channel operate step.



### 3) Manual Mode


- Press to select 3) Manual Mode menu
- Press to adjust Enable Manual Mode > Yes/No
- Press to enter the channel selection list
- Press to select the White, Blue, Special Channel
- Press to adjust Intensity for each channel
- Press to return to main menu

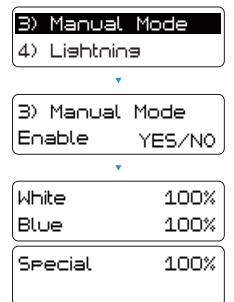

### 4) Lightning


The advanced settings allow you to control the time period storms will occur in a 24 hour period, the number of storms during this set time and the frequency at which a storm period is activated.

- Hold for 3 seconds to unlock controller
- Press to enter main menu
- Press to toggle through options
- Press to select 5) Set Lightning menu
- Press to adjust Enable Lightning > Yes/No
- Press to set Start/End Hour
- Press to adjust Start/End Hour.
- Press to enter next menu
- Press to set Per Day and Frequency
- Press to adjust Per Day
- Press to set Frequency
- Press to adjust Frequency
- Press to return to main menu

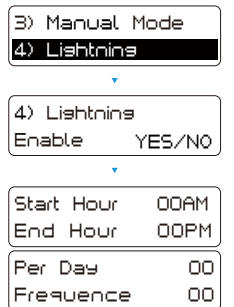


### 5) Demo

- Press to enter main menu
  - Press to select 5) DEMO
  - Press to select YES
- Note: The DEMO will show all your settings in 1 minute.

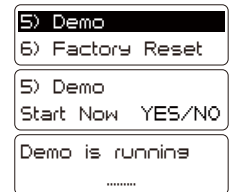

### 6) Factory Reset

- Press to enter main menu
- Press to select 6) Factory Reset
- Press to select YES
- Press to set Factory Reset

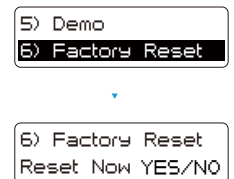

The Control system will gradually ramp the intensity of LED between set points. The graph below outlines how the LEDs will ramp up and down between settings.

